

SNOOZE.

TEMPORIZADOR

1. Deslice el interruptor de función a la posición OFF o AUTO. Presione el botón SLEEP una vez y tendrá 59 minutos para escuchar la radio (Ajuste de fabrica).
2. Si quiere incrementar o reducir el tiempo de desconexión automática, mantenga pulsado el botón SLEEP y presione hora o minutos para a ajustar el tiempo deseado de desconexión. El tiempo máximo de la función SLEEP es de 1 hora y 59 minutos.

TEMPORIZADOR + DESPERTAR CON MUSICA

Repita los pasos de "DESPERTAR CON MUSICA", presione el botón SLEEP para ajustar el tiempo de reproducción de la radio antes de dormir. La radio se parará automáticamente en el tiempo seleccionado y volverá a conectarse de nuevo a la hora preseleccionada de la alarma.

PILA DE SEGURIDAD

Inserte una pila de 9V en el compartimento de la batería. Si existiera un corte de corriente eléctrica o se desenchufara accidentalmente el despertador, el reloj continuaría funcionando. Usted no podrá ver la hora porque la batería no puede iluminar el reloj del display. Cuando la corriente eléctrica vuelva de nuevo, el display indicara la hora correcta. LA alarma no funcionara solo con la batería. Reemplace la batería una vez al año.

LUZ

Ponga el botón LIGHT (LUZ) en posición ON. La luz quedará encendida ininterrumpidamente. Ponga el botón LIGHT (LUZ) en posición 8S. La luz permanecerá encendida 8 segundos cuando pulse el botón Snooze/Luz. Después se apagará automáticamente.

PRECAUCIONES


- No tape las aberturas de ventilación ni tan siquiera con objetos tales como periódicos, manteles, cortinas, paños, etc.
- No lo sitúe al lado de objetos incendiarios como velas encendidas etc.
- Manténgalo alejado de la humedad y salpicaduras a sí como de objetos tales como floreros jarrones, etc. Que puedan derramar líquidos.
- No colocar el producto en estantes para libros o estantes cerrados sin la ventilación adecuada.

ESPECIFICACIONES

1. Rango de frecuencias: AM: 540~1600 KHz FM: 88~108MHz
2. Formato de hora: 24 Horas
3. Alimentación: 230V~50Hz
4. Batería de seguridad: 1PC x 9V (No incluida) 1PCxPP-3

LOCATION OF CONTROLS

1. Volume Control
2. Snooze/Light Button
3. LED Display
4. Hour Button
5. Minute Button
6. Time Set Button
7. Alarm Set Button
8. Sleep Button
9. Function Switch
10. Band Switch
11. Tuning Control
12. Tuning Scale
13. Speaker
14. FM Cable Antenna
15. Plug and cord
16. Battery Compartment
17. Light ON/OFF

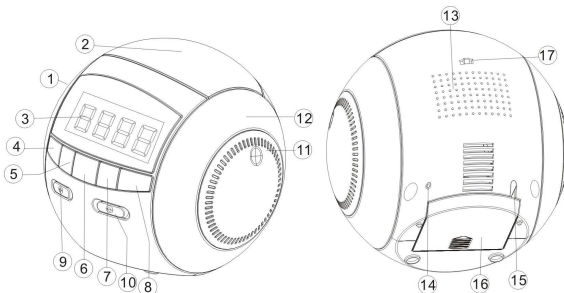

POWER SUPPLY

Check the AC current is same as the instruction show on rating label of your unit and plugs the power cord into the AC outlet. A blinking signal will appear indicating the time.

LISTEN TO THE RADIO

Slide the Function Switch to ON position and rotate the Volume Control to turn on the radio. Adjust the Volume Control to the desired listening level and select your favorite station with the Tuning Control and Band Selector. To turn off the radio, slide the Function Switch to OFF position.

Loose the cable antenna and adjust the direction to get the best reception if the radio could not get a clear station.

CLOCK SETTING

Time and alarm setting can be operated under any mode.

Time setting: Press and hold the Time Set Button and then press the Hour or Minute Button for hour and minute adjustment of the time. Please make sure setting time is AM or PM has indication (A dot will light in the left upper corner indicating that the time is the PM range if your unit is 12 hour version type.)

Alarm Setting: Press and hold the Alarm Set Button and then press the Hour or Minute Button for hour and minute adjustment of the time.

WAKE TO MUSIC

Press and hold the Alarm Set Button and then press Hour or Minute button to set the desired wake up time. Release the Alarm Set Button to show the current time. Repeat the steps of "LISTEN TO RADIO" to your desired station and listening level. Slide the Function Switch to AUTO position. The Alarm Indicator will on. The radio will play your desired station and listening level automatically at the preset alarm time. Push the Function Switch to OFF position to turn off the radio alarm.

WAKE TO BUZZER

Same operation as "WAKE TO MUSIC" to adjust the alarm time, and then rotate the Volume Control

clockwise until a clicking sound is heard. You will be awakened by the buzzer alarm.

Push the Function Switch to OFF position to turn off the buzzer alarm.

SNOOZE FUNCTION

When you want a few extra minutes of sleep after the alarm wakes you, press the Snooze Button, the music or buzzer alarm will be off and turn on again in approximately 9 minutes. Push the Function Switch to OFF to turn off the snooze function. If no actions is taken when alarm is on, the music or buzzer will keep on for 1 hour and 59 minutes and then shut off automatically.

SLEEP TO MUSIC

3. Slide the Function Switch to the position either OFF or AUTO. Press the Sleep Button once and you will have 59 minutes listen to the radio (the default setting).
4. If you want to increase or reduce the automatic shut off time, hold down the Sleep button and press Hour or Minute to adjust as required. The maximum sleep time is 1 hour and 59 minutes.

TO GO TO SLEEP AND WAKE TO MUSIC

Repeat the steps of "WAKE TO MUSIC", press Sleep Button to set for desired time of radio playing before sleep. The radio will stop as your setting of sleep time automatically and will play again at your preset wake up time.

BATTERY BACKUP

Insert a 9 Volt battery in the battery compartment. If there is a power cut or the mains plug has been removed from the power socket, the settings will be retained if the power reserve battery is inserted. For clarity alarm clock does not work on battery. Replace the battery if the device is not used for a prolonged period of time; please take the battery out in order to prevent leakage of battery acid.

LIGHT FUNCTION

Push the Light switch to on position, the light will keep on all the time.

Push the Light switch to off position, the light will keep on for about 8 seconds after you press the Snooze/Light button and then shut off automatically.

WARNINGS:

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc;
- No naked flame sources, such as lighted candles, should be placed on the apparatus;
- It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus;
- Do not place the product in closed bookcases or racks without proper ventilation.
- Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

SPECIFICATIONS

1. Frequency Range AM: 540-1600KHz FM: 88~108MHz
2. Time Format: 24H format
3. AC Power: 230V~50Hz
4. DC Backup: 9V dry battery(1PCx PP-3)